 




lets go™

portable bottle warmer

instructions for use

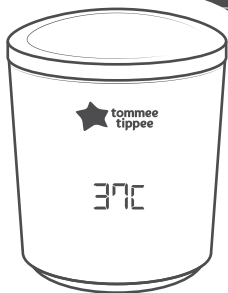

Please read and retain for future reference.
These instructions can also be found at
tommeetippee.com

WARNINGS!

These instructions can also be found at www.tommeetippee.com. Keep this instruction sheet for future reference as it includes important information.

This appliance is intended to be used in household and silimilar applications eg. staff kitchen areas in shops, offices and other working environments;

- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Before plugging in the Bottle Warmer for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.

Make sure bottle is fitted correctly before switching the unit on.

Do not immerse in water. To protect against fire, electric shock and injury to persons. Do not immerse cord, plugs or other parts of the unit in water or other liquid.

Misuse of the product may result in the risk of fire, electric shock and/or personal injury.

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 3 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with this appliance.

The surfaces
are liable to get
HOT during use.



The heating element surface is subject to residual heat after use.

Do not touch hot surfaces.

Ensure that the heating guidelines are followed to ensure that the food is not heated for too long.

For your child's safety – Always check food temperature before feeding.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard. If the damage is from new the unit must be returned to the manufacturer. If within a retail warranty period this product should be exchanged at place of purchase. The manufacturer will then be made aware. Any questions? Visit our website www.tommeetippee.com

Always use on a flat heat resistant surface

Do not move appliance when in use

Do not let the cord hang over edge of kitchen work surface or touch hot surfaces. It is recommended that the cord be kept as short as possible.

Do not use any accessories other than those supplied with this appliance



 
 
Information on the disposal for Waste Electrical & Electronic Equipment (WEEE)

This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product.

Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE. Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

PARTS DESCRIPTION

- ① Lid
- ② Integrated stainless steel neck
- ③ Silicone sealing ring
- ④ On / Off and temperature selection
- ⑤ USB cable charging port

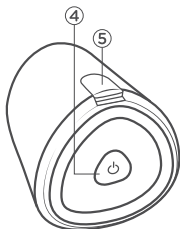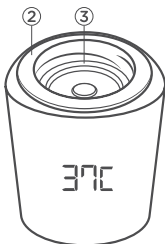

BASE OF UNIT

CLEANING

1. Unplug the USB cable.
2. Ensure product is switched off and cool.
3. Remove the silicone ring and the adapter.
4. Wipe clean with a damp cloth, or use a Tommee Tippee teat and bottle brush for hard to reach areas.
5. Clean all surfaces that comes into contact with bottle with antibacterial wipes before use.
6. Do not clean with abrasive cleaners.
7. Do not immerse in water.

DE-SCALING

We recommend you descale the product daily.

Turn off the unit and allow to cool before descaling, wipe with a damp cloth only.

We recommend that you descale your appliance according to the guidelines below to ensure that it continues to work efficiently.

Use a descaler that is suitable for use with stainless steel ie. coffee or iron descaler, and use as per the manufacturer's guidelines.

Or you can use white vinegar or a descaling sachet to descale your unit.

Please use as per manufacturer's guidelines. Where no method is stated use 15ml of white vinegar and 15ml water.

After descaling wipe clean or use mild liquid soap to clean the heat plate.

HOW TO USE

Choose the correct adapter for the bottle you are using and make sure the silicone ring is in place.



1. Take a prepared baby bottle that requires warming, either breast milk from storage or formula milk made up as per manufacturer guidelines.



2. Put the warmer upside down and screw on the baby bottle securely.



3. Long press for 2 seconds to power on. The power button is on the base.



4. Select a temperature by single click through the options.



5. The warmer starts heating automatically, it will beep when the desired temp has been achieved.



6. The warmer will now keep the milk at the chosen temperature.



7. Turn the unit so the bottle base is flat on the surface, unscrew the warmer from the bottle. Always check the milk's temperature before feeding.



8. Long press for 2 seconds to power off.

BATTERY POWER INSTRUCTION

1. **Battery Power Display:**

Press On/Off button to know current battery power under the state of "power off". When it displays "100" it means 100% power available.

2. **Low Power Display under working state:**

"Lo" displayed to warn that the battery is less than 20% available, please charge. When "Lo" is displayed, it blinks for 6 seconds and then powers off.

Note: Please charge the warmer with 2A power adapter. The battery takes 4 hours to charge fully and you can get 7 uses out of each charge (based on 150ml bottle warming from room temp to body temperature).

COMPATABILITY

Compatible with Tommee Tippee, MAM® and Philips® Avent®. For MAM® and Tommee Tippee use the adapters provided, for Philips® Avent® screw the bottle directly to the warmer.

Do not use on glass bottles.



MAM®



Tommee Tippee

HEATING TIME

Note:

External power supply (2A adapter) is recommended to use when using the warmer at home.

	Heating from chilled to body temperature	Heating from room temperature to body temperature
90ml	7 mins	4 mins
150ml	10 mins	7 mins
260ml	25 mins	12 mins

HEAT PRESERVATION TIME

Warmer can keep milk warm for 4 hours on one charge based on a 260ml bottle.

TECHNICAL PARAMETERS

Model	T5 - 21B
Product Size	85x85x102mm
Input Voltage	5V / 2A
Output Voltage	6-8.4V
Max Power	35W
N.W.	399g
Battery	7.4V / 4400mAH

Mayborn (UK) Limited

Balliol Business Park, Newcastle upon Tyne, NE12 8EW, UK.

EU Representative

Mayborn France Sarl, 56 Rue de Paris,
Boulogne Billancourt, 92100, France.

All IP rights held by Mayborn (UK) Limited and/or its affiliates.
TOMMEE TIPPEE ®. Copyright © 2021.



Ref: 0423770