

## SET UP (Complete set up section before first using the unit).

Please refer to instructions leaflet before use and remember to clean and descale your unit regularly.

**WARNING!** Handle the blade carefully as it is extremely sharp. Care should be taken when handling the sharp blades, emptying the bowl and during cleaning.

- To remove blade, hold the blade tab inside the unit while turning the locking ring on the bottom of the container. (Pictures 1,2,3) This will remove the locking ring and the blade will split into two parts. To re-assemble, reverse these steps.
- Wash blade, jug, basket, sealing ring and lid in soapy water then dry and reassemble. Place unit on a clean, dry kitchen work surface. Place basket inside jug, place lid on jug in the correct orientation and lock in place using the locking dial (Pictures 4,5).
- Unlock water tank by rotating lid anti-clockwise, fill water tank with 350ml of cold water, replace cap and lock in place. Ensure the water level is not filled above the inside edge of the water tank (Picture 6).
- Plug unit into the mains power supply and turn on the mains. Press the start button to turn on the unit and the LCD display will illuminate (Picture 7).
- Set the steam time to 30 minutes using the + buttons (Pictures 8,10).
- Press the start button to start (Picture 11). The unit will now run the steam cycle automatically.
- When the cycle has finished the unit will beep, the LCD display will turn off. Turn off at the power supply, unplug the unit and allow unit to cool completely. Unlock jug and remove residual water and clean jug and steamer basket following instructions in the cleaning section. Discard any remaining water from the water tank by tipping the unit sideways over a sink.
- Wipe unit clean and dry.
- The unit is now ready to use.

## CLEANING & DESCALING

The descaling process will remove deposits of calcium and other minerals in the system that may affect its performance.

### CLEANING

Turn off at the power supply, unplug the unit and allow unit to cool down completely before cleaning. Before first use and after every use wash the jug, lid and basket in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly. Wash the blade, sealing ring and locking ring in warm soapy water and dry thoroughly.

**PLEASE NOTE THE BLADE, SEALING RING AND LOCKING RING ARE NOT DISHWASHER SAFE.**

**WARNING!** Handle the blade carefully as it is extremely sharp. Care shall be taken when handling the sharp blades, emptying the jug and during cleaning.

After every use wipe the jug housing with a damp cloth but do not submerge in water. Do not clean with abrasive cleaners or allow to come in to contact with solvents or harsh chemicals, damage could result.

### DE-SCALING

You should de-scale the water tank of your Baby Food Maker every 4 weeks however if you notice limescale earlier de-scaling may be required sooner. Unplug the unit and allow to cool before cleaning. After each use allow to cool before pouring away remaining water from the water tank by tipping the unit sideways over a sink. A build up of limescale can negatively affect the performance of the unit. Living in a hard water area can produce limescale quicker than other areas therefore descaling is required sooner. Use a descaler that is suitable for use with stainless steel and use as per the manufacturer's guidelines. Alternatively you can use white vinegar to descale your unit, please use as per manufacturer's guidelines. Once you have descaled then follow instructions under set up to perform a final cleaning cycle. You may need to repeat the process if you find that limescale is still present. DO NOT use metal objects or scourers to clean your unit. DO NOT use bleach to clean the unit. DO NOT use abrasive or anti-bacterial materials.

## TROUBLESHOOTING

- Do not use the unit for anything other than the intended use.
  - This unit is not suitable for:
    - Cooking rice, noodles and pasta
    - Heating liquids, soup or water
    - Chopping hard ingredients such as ice cubes and sugar lumps
    - Cooking frozen foods
    - Defrosting and reheating food or keeping food warm
    - Heating baby food jars
    - Heating bottles
- Do not use before water tank is filled with water, unless using the blend only cycle.
- During the automatic steam and blend cycle, the blades will turn to circulate the food. The unit is designed to do this and is a normal part of cycle.
- Once a steam and blend, steam only or blend only cycle has been set, if the jug has not been assembled correctly and the start button is pressed to start a cycle, a beep will sound.
- The unit will not start operating if the lid is not placed on the jug before locking into place, if the lid has not been placed on the jug in the correct orientation or if the basket has not been placed in the jug correctly.
- If the jug is loosened or removed from the unit during a cycle, it will automatically stop and a beep will sound. The cycle will be paused and the unit will return to standby state until the jug is put back and fixed in place, to continue the cycle, press the start button.
- (E1) In the unlikely event that the water tank boils dry during steaming the unit will beep and the LCD will display error E1. If this occurs you will need to re-start the cycle and replace the food. Unplug the unit, allow the unit to stand for 2 minutes before filling the water tank with 350ml of cold water. Re-set cycle following the instructions in the usage section.
- Quickly set the timer by holding down the + and - buttons (Pictures 9 and 10).
- If you find that your machine is not working as efficiently as it was, we would recommend carrying out the descaling process as there may be a build-up of limescale.
- Do not use the Baby Food Maker without food in the jug or steaming basket. If this happens press the cancel button.
- (E2) If you use the smart memory function but have changed the lid orientation between uses, the unit will beep and the LCD will display error message E2. You will need to reset the unit, previous setting will be lost and you will be required to re-input the steam/ blend time.

Information on the disposal for Waste Electrical & Electronic Equipment (WEEE) This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product. Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE. Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation. The product is fitted with a BS 1363 mains plug containing a 5A fuse. If it ever becomes necessary to replace the fuse, only use fuses that are marked BS 1362, and rated at 5A. In the unlikely event that this plug is not suitable for the sockets in your home, it should be removed and a suitable plug fitted as follows: The wires of the mains lead are coloured in accordance with the following code:GREEN AND YELLOW – EARTH. BLUE – NEUTRAL. BROWN – LIVE As these colours may not correspond with the coloured markings sometimes used to identify the terminals in the plug, connect as follows. The wire coloured GREEN AND YELLOW must be connected to the terminal marked E or by the earth symbol or coloured GREEN or GREEN AND YELLOW. The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK. The wire coloured BROWN must be connected to the terminal marked L or coloured RED. If you are in any doubt about how to wire a plug or replace a fuse safely, consult a qualified electrician.







## USAGE

**For your child's safety always check food temperature before feeding**

This unit can steam and blend vegetables, fruits (peeled and cored/pips removed), meats and fish (with bones removed). All food must be diced into approximately 1-2cm cubes before being placed into the jug or basket for cooking. Cooking times can be found in these instructions and for recipes visit [tommeetippee.com](http://tommeetippee.com). During the steaming process hot steam passes through the vent at the back of the unit. Position this unit away from walls and make sure it is not underneath any overhanging shelves or cabinets.

- Place unit on a flat dry kitchen work surface. Place jug or basket with diced food in unit (4) and lock in place using the locking dial (5). Steam no more than 200gms in one cycle. Fill water tank with 350ml of cold water and replace the cap (6).
- Plug unit into mains power supply, the unit will beep. Press the start button to turn on the unit. The LCD display will illuminate.
- CYCLE OPTIONS**
  - TO SET AN AUTOMATIC STEAM TO BLEND CYCLE:** Use jug with no basket, ensure correct lid orientation.
    - Press the mode button and choose steam option. Set the steam time using the +/- buttons. Maximum steam time of 30 minutes.
    - Press the mode button and choose blend option. Set the blend time using the +/- buttons. Maximum blend time of 2 minutes.
    - Press the start button to start. The unit will now run the steam and blend cycle automatically. When setting the automatic cycle, the blend time can be set first, but the unit will always start with the steam cycle first. During the automatic steam and blend cycle, the blades will rotate once every 2 minutes to move food around the container. When cooking meat, it is extremely important to pause the unit every 10 minutes and stir food thoroughly. This is to ensure even cooking.
  - TO SET A STEAM ONLY CYCLE:** Our recommendation is to use the basket, especially for stage 2 and 3 where a chunkier texture is required. Please ensure lid is in the correct orientation.**STEAMING WITHOUT BASKET**
    - Press the mode button and choose the steam option, set the steam time using the +/- buttons. Maximum steam time of 30 minutes.
    - Press the start button to start. The unit will now run a steam cycle.**STEAMING WITH BASKET**
    - Set the steam time using the +/- buttons. Maximum steam time of 30 minutes.
    - Press the start button to start. The unit will now run a steam cycle.
  - TO SET A BLEND ONLY CYCLE:** Use the jug with no basket, ensure correct orientation with lid.
    - Press the mode button and choose blend option. Set the blend time using the +/- buttons. Maximum blend time of 2 minutes.
    - Press the start button to start. The unit will now run a blend cycle. To control the texture of the food a pulse blend can be set. Press the start button, then mode, choose the blend only option, select the time (using 5 second intervals), press start. The unit will pulse once. Repeat the above process for a further pulse.
  - STEAM AND BLEND WITH BASKET:** Reduced water for a chunkier texture.
    - Ensure the food is placed in the steaming basket, the lip of the basket is resting in place on the edge of the jug and the lid is in the correct orientation. (see parts guide)
    - Set the steam time using the +/- buttons. Maximum steam time of 30 minutes.
    - Press the start button to start. The unit will now run a steam cycle.
    - Wait for the steam basket to cool, unclip the lock and remove from the unit. Remove the water from the jug then transfer the steamed food into the jug. Ensure the lid orientation is changed to show the food is now in the jug.
    - Press the mode button and choose the blend option, set the blend time using the +/- buttons. Maximum blend time of 2 minutes.
    - Press the start button to start. The unit will now start a blend cycle.
- When the cycle has finished the unit will beep, the LCD display will turn off. During steaming water will collect in the jug. In stage 1 weaning, where food consistency should be a smooth puree we recommend that you stir in this nutrient rich water. In later weaning stages, when thicker textures are required we would recommend removing some/all of this water depending on your baby's preference. Steam and blend separately with the addition of the steam basket and there will be no water mixed with the food. Leave the unit to stand for 2 mins before unlocking jug and decanting food into storage. Take care when removing the jug and lid as steam may still be present and jug hot to touch.
- Turn unit off at the power supply and unplug the unit. Disassemble blade from the jug and wash all parts in warm soapy water.
- If preparing another batch of food straight away, make sure that you top up the water tank with more water. You must wait for the unit to cool before topping up the water tank.

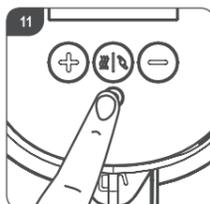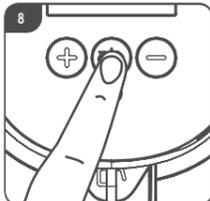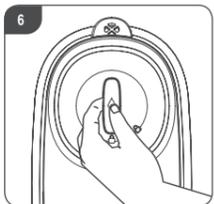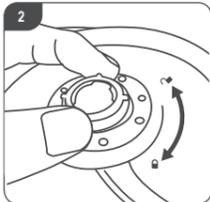

Mayborn (UK) Limited,  
Balliol Business Park,  
Newcastle upon Tyne,  
NE12 8EW, UK

Copyright © Mayborn (UK) Limited 2018.  
Made in China.  
Model number: 1156. Voltage:  
220-240V~ 50-60Hz 630W.  
(Steamer:500W) (Blender:130W)



Any questions?  
Visit our website  
[tommeetippee.com](http://tommeetippee.com)



## EXTRA FUNCTIONS

### PAUSE

To pause while mid cycle, press and hold the mode button for three seconds until the unit beeps. The LCD will flash. This will pause the cycle indefinitely. The jug can be removed during this time however it will be hot so wait until it is cool. Press the start button to continue the cycle.

### CANCEL

To stop a cycle while mid cycle, press the start button for three seconds until unit turns off.

### SMART MEMORY FUNCTION

If using the Baby Food Maker again within 30 minutes of the last use you can press the start button to switch the unit on, then press and hold '+' and '-' button at the same time, press the start button again and it will repeat the last cycle. Please note that the smart memory function cannot be used with 3.2 steam and blend with basket.

STEAMING TIMES			
All times are approximate per 200gms. Steam no more than 200gms in one cycle. The MAX fill line on the jug should not be exceeded when using a blend only cycle. Always check food is cooked and food temperature before feeding.			
VEGETABLES	FRUIT	MEAT	
Potatoes 15min	Apple 10min	Fish 15min	
Carrots 15min	Pear 10min	Chicken 25min	
Broccoli 15min	Oranges 10min	Veal / Beef 25min	
Courgette 15min	Peach 10min		
Cauliflower 15min	Plum 10min		
Pumpkin 15min			

When cooking meat, it is extremely important to use the steaming basket only. Pause cooking every 10 minutes and stir food thoroughly to ensure even cooking.

## BLENDING TIMES

The unit can be set to different times to control the texture of the food. These times can be used as a guide to achieve different consistencies for each weaning stage.

STAGE ONE	STAGE TWO	STAGE THREE
When introducing first tastes food needs to be pureed. Blend for ~ 2 minutes to get a smooth consistency.	Here you can start experimenting with a combination of flavours that are smooth lumpy chunks. Blend for ~ 20 – 30 seconds.	Now they can eat bigger portions with a chunky texture. Blend for ~ 4-10 seconds.

The water that collects in the jug when using the jug to steam and blend is nutrient rich and can be kept for a smoother consistency. When preparing food for latter stages our recommendation to is use the separate steam and blend mode with the jug and basket to create a chunkier texture with less water. If your preferred option is to use the automatic steam and blend function with the jug then the water can be discarded to allow for a chunkier texture. (Blend times outlined are approximate).

**To help with your weaning journey find more information about the Tommee Tippee Baby Food Maker, and recipes at [www.tommeetippee.com](http://www.tommeetippee.com)**

Department of health recommends that solid food should not be introduced before 6 months. Although you can start earlier (but not before 4 months) if advised by your health visitor or GP.



# baby food maker

## INSTRUCTIONS FOR USE

# مُحضر طعام الأطفال

## تعليمات الاستخدام



## IMPORTANT NOTICE FOR CLEANING AND REASSEMBLY

The blade, sealing ring and locking ring are not dishwasher safe.

If you notice any wear and tear to your unit, discontinue use and contact us at

[www.tommeetippee.com](http://www.tommeetippee.com)

ملاحظة هامة للتظظيف وإعادة التجميع

غسل الشفرة والختم المطاطي الدائري وقفل الإغلاق الدائري في غسالة الصحون ليس أمناً إذا لاحظتي أي تآكل أو تلف على وحدتك، عليك التوقف عن استخدامها والاتصال بنا على

[www.tommeetippee.com](http://www.tommeetippee.com)



Please read and keep these instructions

يرجى قراءة هذه التعليمات والاحتفاظ بها

0423225

**Any questions? Visit our website [www.tommeetippee.com](http://www.tommeetippee.com)**

agents when cleaning, use a soft cloth and a mild detergent.

To prevent damage to the appliance do not use alkaline cleaning

maximum fill level indicated on the product. **CAUTION:**

thoroughly. The blade is not dishwasher safe. Do not fill above dry thoroughly. Wash the blade in warm soapy water and dry in warm soapy water or use a dishwasher (top shelf only) and before first use and after every use wash the jug, basket and lid sharp blades, when emptying the bowl and during cleaning.

it is extremely sharp. Care shall be taken when handling the before cleaning the appliance. Handle the blade carefully as

in use. Allow to cool before putting on or taking off parts and before changing accessories or approaching parts that move cleaning. Switch off the appliance and disconnect from supply

it is left unattended and before assembling, disassembling or this appliance. Always disconnect the appliance from supply if

Do not use any accessories other than those supplied with in use. Do not place anything on top of the Baby Food Maker.

the steam to dissipate into the air. Do not move appliance when

food maker below an open area or away from wall units to allow

maker can damage kitchen units, consider positioning the baby

kitchen surface. Steam from the daily use of the baby food

order to avoid a hazard. Always use on a flat heat resistant

cord is damaged it must be changed by a qualified person in

malfunctions or has been damaged in any manner. If the supply

appliance with a damaged cord or plug or after the appliance

test the temperature before serving. Do not operate any

Always stir heated food to ensure even heat distribution and

for too long. Always check food temperature before feeding.

guidelines are followed to ensure that the food is not heated

the appliance due to sudden steaming. Ensure that the heating

poured into the Baby Food Maker as it can be ejected out of

scalds. Use in a well ventilated area. Be careful if hot liquid is

keep hands away from steam vents as it can cause burns and in use the Baby Food Maker contains hot water and steam.

use. Do not touch hot surfaces use handles and knobs. When The heating element surface is subject to residual heat after

**The surfaces will get hot during use.**

maintenance shall not be made by children

descaling is not required for this product. Cleaning and user

use this appliance. User maintenance other than cleaning and

with operating electrical appliances. Never allow children to

their safety. Children do not understand the dangers associated

concerning the use of the appliance by a person responsible for

unless they have been given supervision or instruction

or mental capabilities, or lack of experience and knowledge,

persons (including children) with reduced physical, sensory

short as possible. This appliance is not intended for use by

of the cord safely. It is recommended that the cord be kept as

wind on the base of the unit to allow to adjust the length

or touch hot surfaces. The product has been fitted with a cord

not let the cord hang over the edge of the kitchen work surface

Keep the appliance and its cord out of reach of children. Do

result in the risk of fire, electric shock and/or personal injury.

of the unit in water or other liquid. Misuse of the product may

and injury to persons do not immerse cord, plugs or other parts

Do not immerse in water. To protect against fire, electric shock

water has been added to the unit before switching the unit on.

supply by checking the label on the base of the unit. Ensure

time ensure that the voltage is compatible with your electricity

outdoors. Before plugging in the Baby Food Maker for the first

This appliance is intended for household use only. Do not use

**includes important information.**

**Keep this instruction sheet for future reference as it**

[www.tommeetippee.com](http://www.tommeetippee.com)

These instructions can also be found at

**IMPORTANT WARNINGS!**

## تحذيرات مهمة!

يمكنك الاطلاع أيضًا على هذه التعليمات على

www.tommeetippee.com

احتفظي بورقة التعليمات هذه للرجوع إليها في المستقبل لأنها تتضمن معلومات مهمة.

هذا الجهاز مُخصّص للاستخدام المنزلي فقط. لذا يرجى عدم استخدامه خارج المنزل. وتأكدى قبل توصيل مُحضّر طعام الأطفال بالكهرباء من أن الجهد الكهربائي متوافق مع التيار الكهربائي لمصدر الكهرباء من خلال الاطلاع على الملصق الموجود على قاعدة الوحدة. واضمني إضافة المياه إلى الوحدة قبل تشغيلها

وتجنّبي غمره بالمياه. وللوقاية من نشوب الحرائق وإصابة الأشخاص بالصدمات الكهربائية والأذى، لا تغمري الجهاز أو السلك أو القابيس أو أي جزء آخر من أجزاء الوحدة في المياه أو أي سائل آخر. فقد يؤدي سوء استخدام المنتج إلى خطر نشوب الحرائق أو الإصابة بالصدمات الكهربائية أو الأذى الشخصي أو جميع ما سبق. واحرصي على حفظ الجهاز والسلك الخاص به بعيدًا عن متناول الأطفال. ولا تتركي السلك الكهربائي يتدلى فوق حافة سطح تجهيز الطعام في المطبخ أو يلامس الأسطح الساخنة. والجهاز مزود ببكرة سلك على قاعدة الوحدة ليسمح لك بضبط طول السلك بأمان. ومن المُستحسن إبقاء السلك قصيرًا قدر الإمكان. لم يُعد هذا الجهاز للاستخدام من الأشخاص (بما فيهم الأطفال) الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو نقص في الخبرة والمعرفة، إلا إذا كان ذلك تحت إشراف أو توجيه خاص باستخدام الجهاز من شخص مسؤول عن سلامتهم. لا يعي الأطفال المخاطر المرتبطة بتشغيل الأجهزة الكهربائية. لذا لا تسمححي أبدًا للأطفال باستخدام هذا الجهاز. وصيانة المستخدم بخلاف التنظيف وإزالة الترسيبات غير مطلوبة لهذا المنتج. لا يجوز السماح للأطفال بتنظيف وصيانة الجهاز

### الأسطح معرضة للسخونة أثناء استخدام

يشع سطح عنصر التسخين بالحرارة المتبقية بعد الاستخدام. لذا لا تلمسي الأسطح الساخنة واستخدمي المقابض والمساکات

عند استخدام المُحضر، فإنه يحتوي على الماء الساخن والبخار. لذا أبقِي يديك

بعيدةً عن فتحات البخار لأنها يمكن أن تسبب الحروق والإحمرار. واستخدمي الجهاز في منطقة جيدة التهوية. وتوخي الحذر عند سكب السائل الساخن في مُحضّر طعام الأطفال حيث أنه يمكن أن يخرج من الجهاز بسبب التبخير المفاجئ. وتأكدى من اتباع إرشادات التسخين لضمان عدم تسخين الطعام لفترة طويلة جدًا. يرجى التأكد دائمًا من درجة حرارة الحليب قبل الرضاعة.

كما يرجى تقليب الحليب الساخن لضمان توزيع الحرارة، ويرجى التّحقق من درجة الحرارة قبل تقديم الحليب للرضيع. وتجنّبي تشغيل الجهاز عندما يكون السلك أو القابيس تالفًا أو بعد تعطله أو تلفه بأي شكل من الأشكال. وفي حالة تلف سلك الإمداد بالكهرباء، فينبغي تغييره من خلال شخص مؤهل لتفادي التعرض لأي خطر. واستخدمي الجهاز دائمًا على سطح مطبخ مقاوم للحرارة. ولا تحرك الجهاز أثناء الاستخدام. ولا تضعي أي شيء فوق مُحضّر طعام الأطفال. قد يتسبب البخار الناتج عن الاستخدام اليومي لجهاز تحضير طعام الأطفال بتلف أثاث المطبخ، لذا حاولي أن تضعي جهاز تحضير طعام الأطفال في مكان مكشوف أو بعيداً عن خزائن الحائط من أجل السماح للبخار بأن يتلاشى في الهواء. وتجنّبي استخدام أي ملحقات أخرى بخلاف الواردة مع هذا الجهاز. وافصلي الجهاز دائمًا من مصدر الكهرباء إذا كنتِ ستتركينه بلا مراقبة، وقيل تجميعه أو تفكيكه أو تنظيفه. أوقفي تشغيل الجهاز وافصليه من مصدر الطاقة الكهربائية قبل تغيير الملحقات أو الاقتراب من الأجزاء التي تتحرك أثناء الاستخدام. وارتكي الجهاز ليبرد قبل وضع أي شيء في الجهاز أو إزالته وقيل تنظيف الجهاز. وتعاملي مع الشفرة بعناية لأنها حادة جدًا. ويجب توخي الحذر عند التعامل مع شفرات حادة، أثناء تفريغ الوعاء والتنظيف. واغسلي الجهاز قبل استخدامه لأول مرة وبعد كل استخدام للوعاء والغطاء بالماء الدافئ والصابون أو استخدمي غسالة الصحون (الرف العلوي فقط) وارتكبيهما حتى يجفّا تمامًا. واغسلي الشفرة بالماء الدافئ والصابون وارتكبيها حتى تجف تماما. ويرجى العلم بأن غسل الشفرة في غسالة الصحون ليس آمنًا. ولا تملئي المُحضر بالماء أعلى مستوى التعبئة المُحدد على المنتج. أي استفسار؟ يرجى زيارة موقعنا

www.tommeetippee.com

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136


137

138

139

140

دليل أجزاء مُحضّر طعام الأطفال

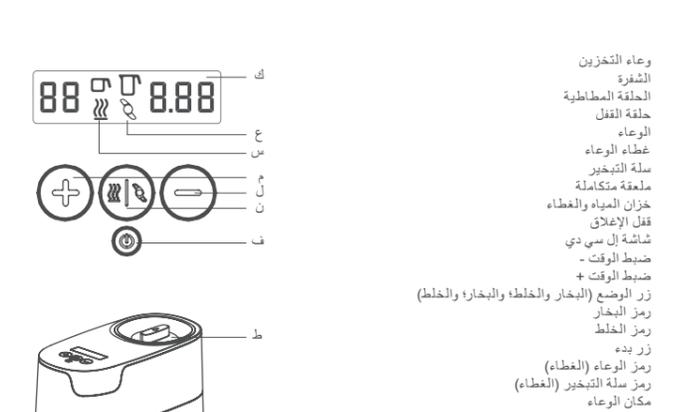

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183