




single bottle steriliser

INSTRUCTIONS FOR USE

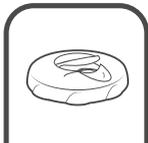

Base Lid and Steam/Pouring Steam Vent



Base Unit



Basket and Lid

MICROWAVE STEAM STERILISATION

This steriliser is designed for use with closer to nature bottles. For instructions on cleaning and sterilising Tommee Tippee closer to nature bottles please refer overleaf.



1 Before sterilisation wash bottle and accessories in warm soapy water and rinse in clean water or use a dishwasher to remove any milk residue.



2 Remove basket and accessories from base unit. Pour 80ml of water into the base unit using closer to nature bottle to measure (dotted line indicator).



3 Load bottle into basket as shown. Attach basket lid to the basket with the twist lock feature. Place basket back into unit.



4 Screw on lid ensuring steam vent is closed. Place the steriliser in the centre of the microwave, and microwave on full power according to the table below.

Wattage	Full Power	Cooling Time
Up to 800w	3 min 30 secs	3 minutes
801-1000w	2 min 30 secs	3 minutes

5 Allow to cool for 3 minutes before removing the steriliser from the microwave.



6 Before removing the lid press the steam vent to allow steam to escape away from you. Use pouring spout to remove any excess water.

7 Wash your hands thoroughly before handling sterilised items. Take care as the items will be hot.

8 Remove the basket (rotate basket lid anti-clockwise to remove) and lift out sterilised items. Make up feed according to manufacturer's instructions.

9 If the steriliser is left unopened bottle will remain sterile for 3 hours. After this time re-sterilisation is required.

WARNING!

Always add 80ml of water before use. Ensure the unit does not boil dry. Ensure microwave is set correctly on full power. Always allow 3 minutes cooling time before removing from the microwave.

When removing the steriliser from the microwave, take care, as unit will contain hot water and steam. Place on a hard, heat resistant surface. Always release steam using the steam vent before completely removing the lid.

Do not use chemical sterilising solutions / tablets in the microwave.

If you have a combination oven, ensure grill is switched off and the oven has cooled before use.

Always follow loading instructions to ensure sterilisation.

Do not place metallic items in the microwave as damage could result.

Make sure the microwave turntable is clean and dry before use.

If components are washed in a dishwasher with other items, which have residues of strong coloured sauces (e.g. tomato), they may discolour over time.

Keep out of reach of small children.

COLD WATER STERILISATION

1 Prepare sterilising solution as instructed by the sterilising solution manufacturer. You will need approximately 1.5 L.

2 Place closer to nature bottle upright inside the basket and place the basket inside the steriliser.

3 Ensure the bottle is filled first, then continue to fill the Steriliser until the solution reaches the base of the neck.

4 Place hood upside down inside the bottle neck ensuring that it is completely submerged.

5 Place assembled screw cap and teat upside down inside the hood ensuring that it is completely submerged.

6 Assemble the basket lid to the basket with the twist lock feature ensuring that all the bottle components are fully submerged in the Sterilising solution.

7 Assemble the Steriliser lid to the Steriliser ensuring the pouring/steam vent is in the closed position.

THE UNIT IS NOT WATER TIGHT AND THEREFORE MUST REMAIN IN THE UPRIGHT POSITION.

bottle & teats

FOR YOUR CHILD'S SAFETY & HEALTH **WARNING!**

Always use this product with adult supervision.

Before first use clean the product.

Never use feeding teats as a soother.

Continuous and prolonged sucking of fluids will cause tooth decay.

Always check food temperature before feeding.

Inspect before each use and pull the feeding teat in all directions. Throw away at the first signs of damage or weakness.

Do not leave the feeding teat in direct sunlight or near a source of heat, or leave in disinfectant ("sterilising solution") for longer than recommended, as this may weaken the teat.

Before first use, place in boiling water for 5 minutes. This is to ensure hygiene.

Clean before each use.

Always wash the product immediately after use.

Accidents have occurred when babies have been left alone with drinking equipment due to the baby falling or if the product has disassembled.

Tooth decay in young children can occur even when non sweetened fluids are used. This can occur if the baby is allowed to use the bottle for long periods through the day & particularly through the night, when saliva flow is reduced or if it is used as a soother.

For safety and hygiene reasons it is recommended the teat is replaced at least every 2 months.

Keep all components not in use out of reach of children.



✓ **TAKE EXTRA CARE WHEN CLEANING THE SENSITIVE ANTI-COLIC TEAT VALVE.**

In order to ensure optimum venting the teat valve is manufactured using a thinner silicone than the teat itself and therefore care needs to be taken during cleaning to ensure no damage is caused.



✗ **DO NOT USE a teat brush or any other implement to clean the anti-colic valve as this may split & damage it.**

However, performance of the teat may be affected if the anti-colic valve is not cleaned thoroughly after each use.

Ensure valve is flushed with warm water during cleaning.

DO NOT turn the teat inside out for cleaning. Damage could result.

Use a teat brush, but not on the anti-colic valve (see above*).

DO NOT clean or allow to come into contact with solvents or harsh chemicals. Do not store in direct sunlight or near a source of heat. Damage could result.

DO NOT allow product to come into contact with oil based foods (e.g. oil/tomato based sauces) as staining will occur.

CLEANING & STERILISING

The new Tommee Tippee teat and screw ring have been designed to be placed into the steriliser fully assembled, in order to avoid assembly problems after sterilisation.



1 After each use disassemble all parts of the bottle.



2 Wash thoroughly with hot soapy water.



3 Rinse all components using fresh water.



4 After rinsing re-assemble the teat and screw ring.



5 Place all components including the assembled teat and screw ring in steriliser. After sterilisation the teat can then be picked up using the screw ring and used as normal.

Alternatively after use the components can be disassembled, washed and sterilised as normal. Suitable for all forms of sterilisation.

MAKING UP FEEDS

Make up feeds according to feed manufacturer's instructions.

Use cooled, freshly boiled water.

DO NOT use hot water.

Heating in a microwave oven may produce localised high temperatures. Take extra care when microwave heating. Always stir heated food to ensure even heat distribution and test the temperature before serving. Do not heat in a microwave with bottle sealed. Remove teat, locking ring and dome cap.

Not suitable for use in a conventional oven or a combination microwave oven with the grill feature switched on.

Mayborn Baby and Child
Northumberland Business Park West
Cramlington, Northumberland NE23 7RH, UK
Mayborn Baby and Child
is a trading style of Jackel International Limited.
Copyright © Jackel International Limited 2008

tommeetippee.com