




**colic+soothe™**

milk air remover

Instructions for use

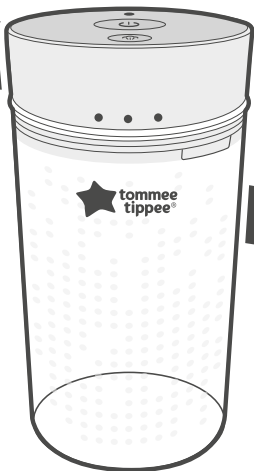

# Here for you

**Feeding a baby who is experiencing colic symptoms can be stressful.**

Colicsoothe is here to help support you and your baby by reducing the amount of air your baby ingests. Air ingestion is one of the things that can cause baby discomfort during feeding.

Using innovative vacuum technology this product draws air out of the milk, which can be introduced to milk during the preparation of your bottle, usually by shaking to mix formula. We recommend stirring your formula to minimise this.

If your baby is experiencing colic symptoms you can also use our advanced anti-colic™ bottle which removes air from the bottle whilst baby is feeding. This along with colicsoothe will give you the best chance of reducing air ingestion throughout your feeding routine.

## **Questions?**


Contact our customer care team on 1-800-096-938  
Or scan the QR code to watch a video on how to use



# Contents

Preparing for use .....	4
How to charge .....	4
How to use .....	5
How to clean .....	7
Troubleshooting .....	8
Safety information .....	8


- A** Lid
- B** Chamber
- C** USB power cable
- D** USB power adaptor
- E** Start button
- F** Light
- G** Pressure release valve



0.6m USB-C  
power cable



Adaptor plug

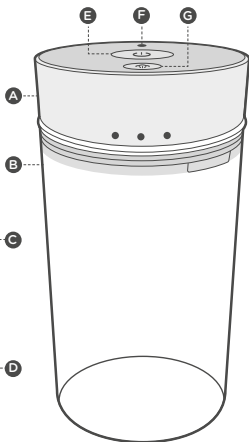

Light colour/action	Meaning
Static green light	Cycle in progress
Flashing green light	Cycle finished
Static red light	Low battery
Flashing red light	Charge product before use
Green light when product is connected via power adaptor	Fully charged

## Preparing for use

When preparing a bottle for baby, ensure hands, surfaces and the product are thoroughly clean and dry.

## How to charge

1. Charge before first use using the USB cable and adaptor provided. It will take approximately 4 hours to fully charge.
2. When the unit has 20% battery left a red light **F** will appear. When the red light **F** is flashing you must charge the product.

20% battery remaining  
red



needs charging  
red flashing



3. The product is fully charged when the light turns green **F**.



fully charged  
green




## How to use

Ensure the product has charge and is on a flat and stable surface prior to using.

1. Prepare your bottle as per the manufacturer's recommendation if using formula. Once ready place into the chamber **B**. Breast milk can also be used.
2. Before placing into the chamber, remove the lid, teat and screw ring of your bottle and place the bottle base **ONLY** into the chamber **B**.
3. Now place the lid **A** onto the chamber **B**, and screw on tightly keeping the product on a flat surface.

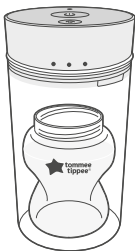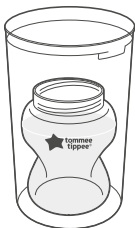

4. Press the start button **E** for approximately 2 seconds to start the air removal cycle. The green light **F** will show and you will hear a sound to indicate the vacuum system has started, this will last up to 60 seconds.


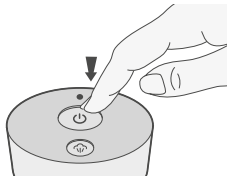


**After approximately 60 seconds the sound will stop, however the air removal cycle will continue.**


**The total time is approximately 3 minutes.**

**Note: Keep the device upright, the air removal cycle will stop if the device is tipped.**

5. When the air removal cycle is finished the green light will flash.

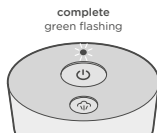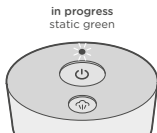

6. Before removing the lid, press and hold the pressure release valve **G**. You will now hear air being drawn into the lid **A**. Once this stops, keep holding the release valve **G** for a further 10 seconds. You will now be able to remove the lid by turning it anticlockwise.

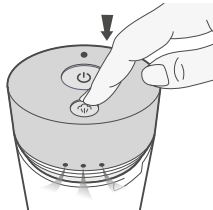

7. Carefully remove your bottle from the chamber **B**. Attach your screw ring and teat, and feed. **DO NOT shake the bottle once your milk has been through the air removal cycle, as this will put air back into the milk.**

Use the prepared milk immediately.

**Note:** If any milk is spilt into the chamber, see below for cleaning methods.

## How to clean

The lid **A** is wipe clean only.

The chamber **B** can be hand washed only with warm soapy water and then rinsed.

**DO NOT CLEAN IN THE DISHWASHER, OR STERILISE.**

# Troubleshooting

## **Green/red light is flashing and my product is not working.**

Make sure your product is on a flat surface, then press the start button **E**. Your product will not operate if the device is tilted.

## **My product won't switch on (no green light).**

Ensure the unit is fully charged, connect the USB cable to a USB adaptor, and plug it in. Once the green light **F** is on, the unit is ready to use. Charging from an empty battery will take approximately 4 hours.

## **I can't remove the lid.**

After the air removal cycle has finished (approximately 3 minutes) , follow point 6.

# Safety information

## **IMPORTANT WARNINGS**

These instructions can also be found at [www.tommeetippee.com](http://www.tommeetippee.com)

Please read and retain the instruction guide for future reference as it includes important information.

- Adult use only – Keep all components out of the reach of children. Do not allow a child to play with it – It is not a toy.
- Do not operate if there is any damage to the appliance or the cord.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Keep USB cords away from hot surfaces.



- Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- Only use this product on a stable and flat surface. Do not attempt to remove, replace or repair the battery from this product.
- Do not dispose of batteries in a fire, they may explode.
- Please dispose of batteries in accordance with local regulations.
- Do not subject cells or batteries to mechanical shock.
- Do not use any charger other than the charger specifically provided for use with the equipment.
- Do not leave the product on charge when not in use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

This appliance contains batteries that are non-replaceable.

**WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

Use only with ES050C-U050100XOS or JOD-S-050100AU-U-2 supply unit

## Technical Information

- Model: 1211
- Rated voltage: 3.7 V
- Input voltage: 5V 0.5A
- Battery Type: 18350 Li ion
- Battery Capacity: 900 mAh

This product contains a battery which is permanently built into the product for safety and performance reasons. The battery should not require replacement during the lifetime of the product. It should only be removed by skilled service personnel. Dispose of this product as electrical waste to ensure the correct waste treatment of the battery.

Made in China.



# Let us know what you think

We'd love to hear what you think of our colicsoothe air remover. Share your photos, reviews and tell us about your experiences on our social channels.



Any questions?

Visit our website: [tommeetippee.com](https://www.tommeetippee.com)

Mayborn ANZ Pty Ltd., (ABN 66 154 703 134), PO Box 475,  
Mt Waverley , VIC 3149, AUSTRALIA

All IP rights held or used under licence by Mayborn (UK) Limited  
and/or its affiliates. TOMMEE TIPPEE®, COLICSOOTHE™. Copyright © 2023.

Patented and patent pending; EP2948032 and see  
<https://www.tommeetippee.com/en-us/legals/patent>.